KENMORE®

Automatic QUAD WAFFLE BAKER

SANDWICH TOASTER and GRILL

TEFLON®
Treated Grids

- Fully Automatic
- Two Appliances in One
- Grids Quickly Reverse From Waffle Baker to Sandwich Toaster
- Signal Light Indicates When Correct Temperature Is Reached
- Temperature Control Lets You Dial Exact Heat

MODEL 6458

HOW TO CONVERT YOUR WAFFLE BAKER INTO A GRILL AND SANDWICH TOASTER

Disconnect cord from electric supply. Open waffle baker slightly and turn front lid handle to vertical ▌ position —as in Fig. A. When top is in vertical position (as in Fig. B), lift straight up on top to disengage stop—then lay flat . . . to grilling position. The handle forms a leg that supports the top level when it is opened to a flat position. Note —when closing lid turn handle to horizontal ▬ position.

Fig. A

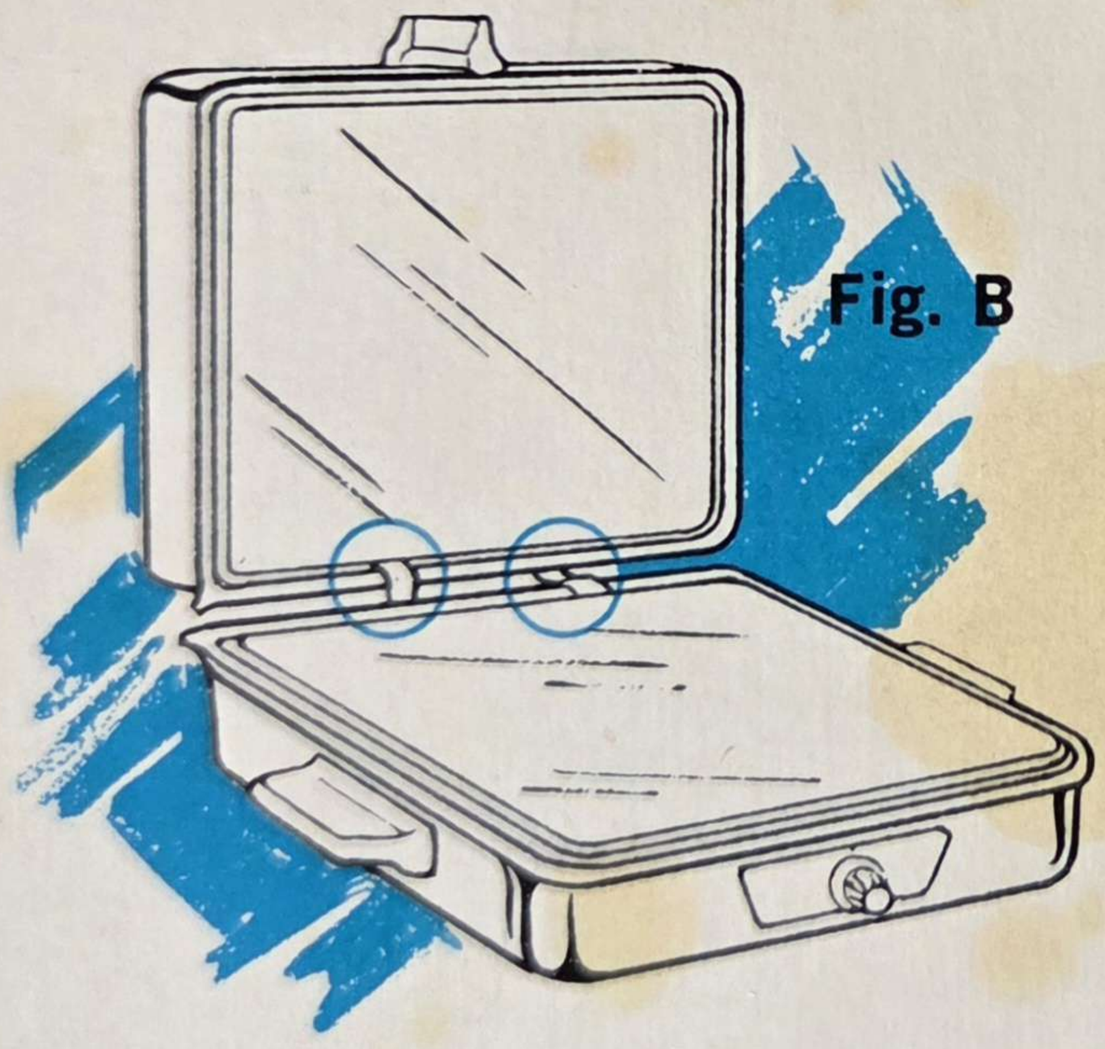

Fig. B

TO REMOVE GRIDS

Push back spring clips as shown in Fig. B. Lift grid up by spout and remove. Replace in same way, making sure grids are firmly in place.

When using as a grill make sure grease drip spouts are located at same corner, as in Fig. C. Place receptacle of of your choice under spouts to catch excess drippings when using as a grill.

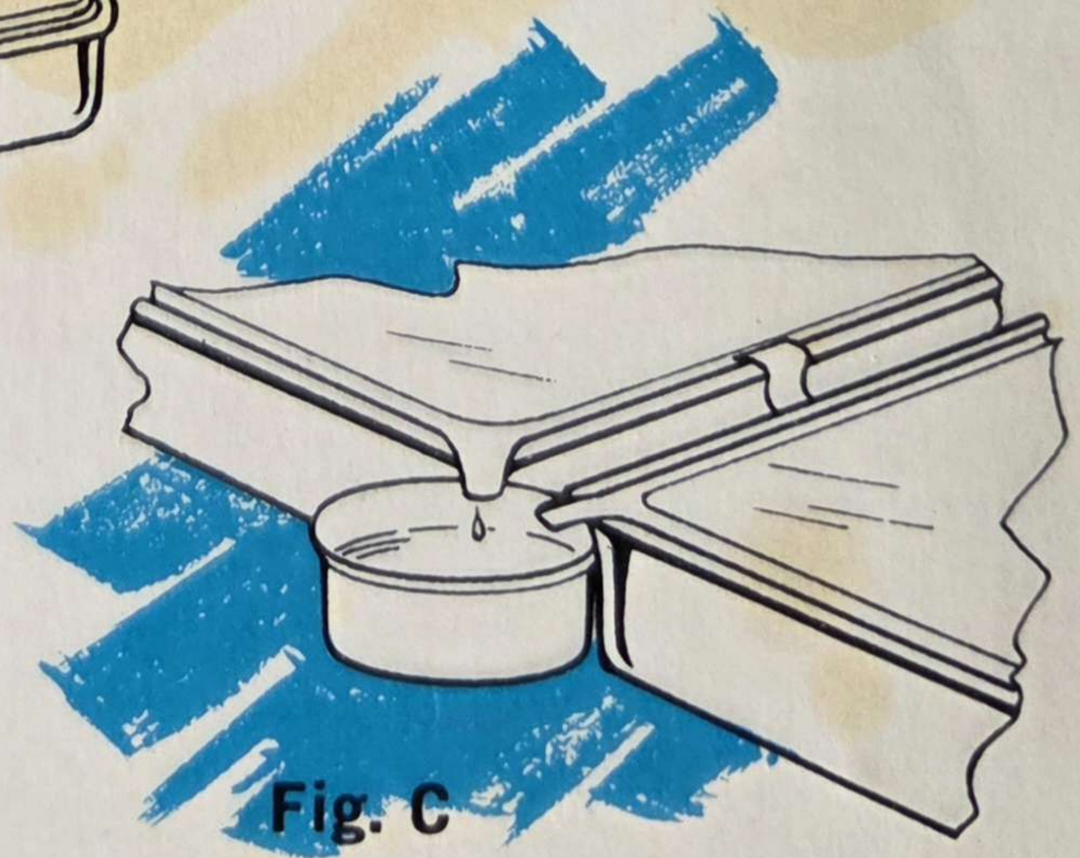

Fig. C

The Teflon protected waffle grids need no greasing and oiling. However, we recommend conditioning waffle grids before first use. Wash and dry the waffle grids and brush them lightly with non-salted melted shortening. Discard the first waffle—as it will have absorbed excess grease.

NOTE: Your new grill may smoke slightly on first use. This is due to the newness and smoking will stop after it is heated for a short time. Do not use Metal Spatulas, Knives, Forks or other Metal Instruments.

DO NOT OIL OR GREASE GRIDS AFTER FIRST USE.

HELPFUL HINTS...

FOR BAKING WAFFLES...

Install the waffle grids. Plug cord into wall outlet. Set thermostat control knob to the MED position in the WAFFLE range. If a lighter shade is desired – set toward LITE, for darker waffles set toward DARK. Close lid. When signal light goes off, pour in waffle batter and close lid. Signal light will glow again while waffle is baking. Remove waffle when signal light goes out and waffle stops steaming. When you are through baking, disconnect cord and leave waffle baker open to cool. Simply wipe clean with soft cloth or paper towel before storing.

AS AN OPEN GRILL...

Install sandwich grids. Be sure grease drip spouts are located in same corner – as shown in Fig. C. Place receptacle of your choice under spouts. Close top. Plug cord into wall outlet. Set thermostat control knob to desired position in the GRILLING range. See drawing D. When signal light goes off, open top so that it lies flat. (Handle forms leg – as shown in Fig. A.) Before storing, allow grill to cool in open position and simply wipe clean with soft cloth or paper towel.

AS A CLOSED GRILL...

Install sandwich grids – as shown in Fig. C. Close grill. Plug cord into wall outlet. Set thermostat control knob to extreme or maximum heat position as indicated in drawing D. When signal light goes out, open grill and place sandwiches, buns, or other food on lower grill. Close grill until food is toasted as you like it. Light buttering of outside surfaces of sandwiches improves flavor. Notice that hinges expand to thickness of food so that it is not crushed. After use, allow grill to cool in open position. Wipe clean with soft cloth or paper towel before storing.

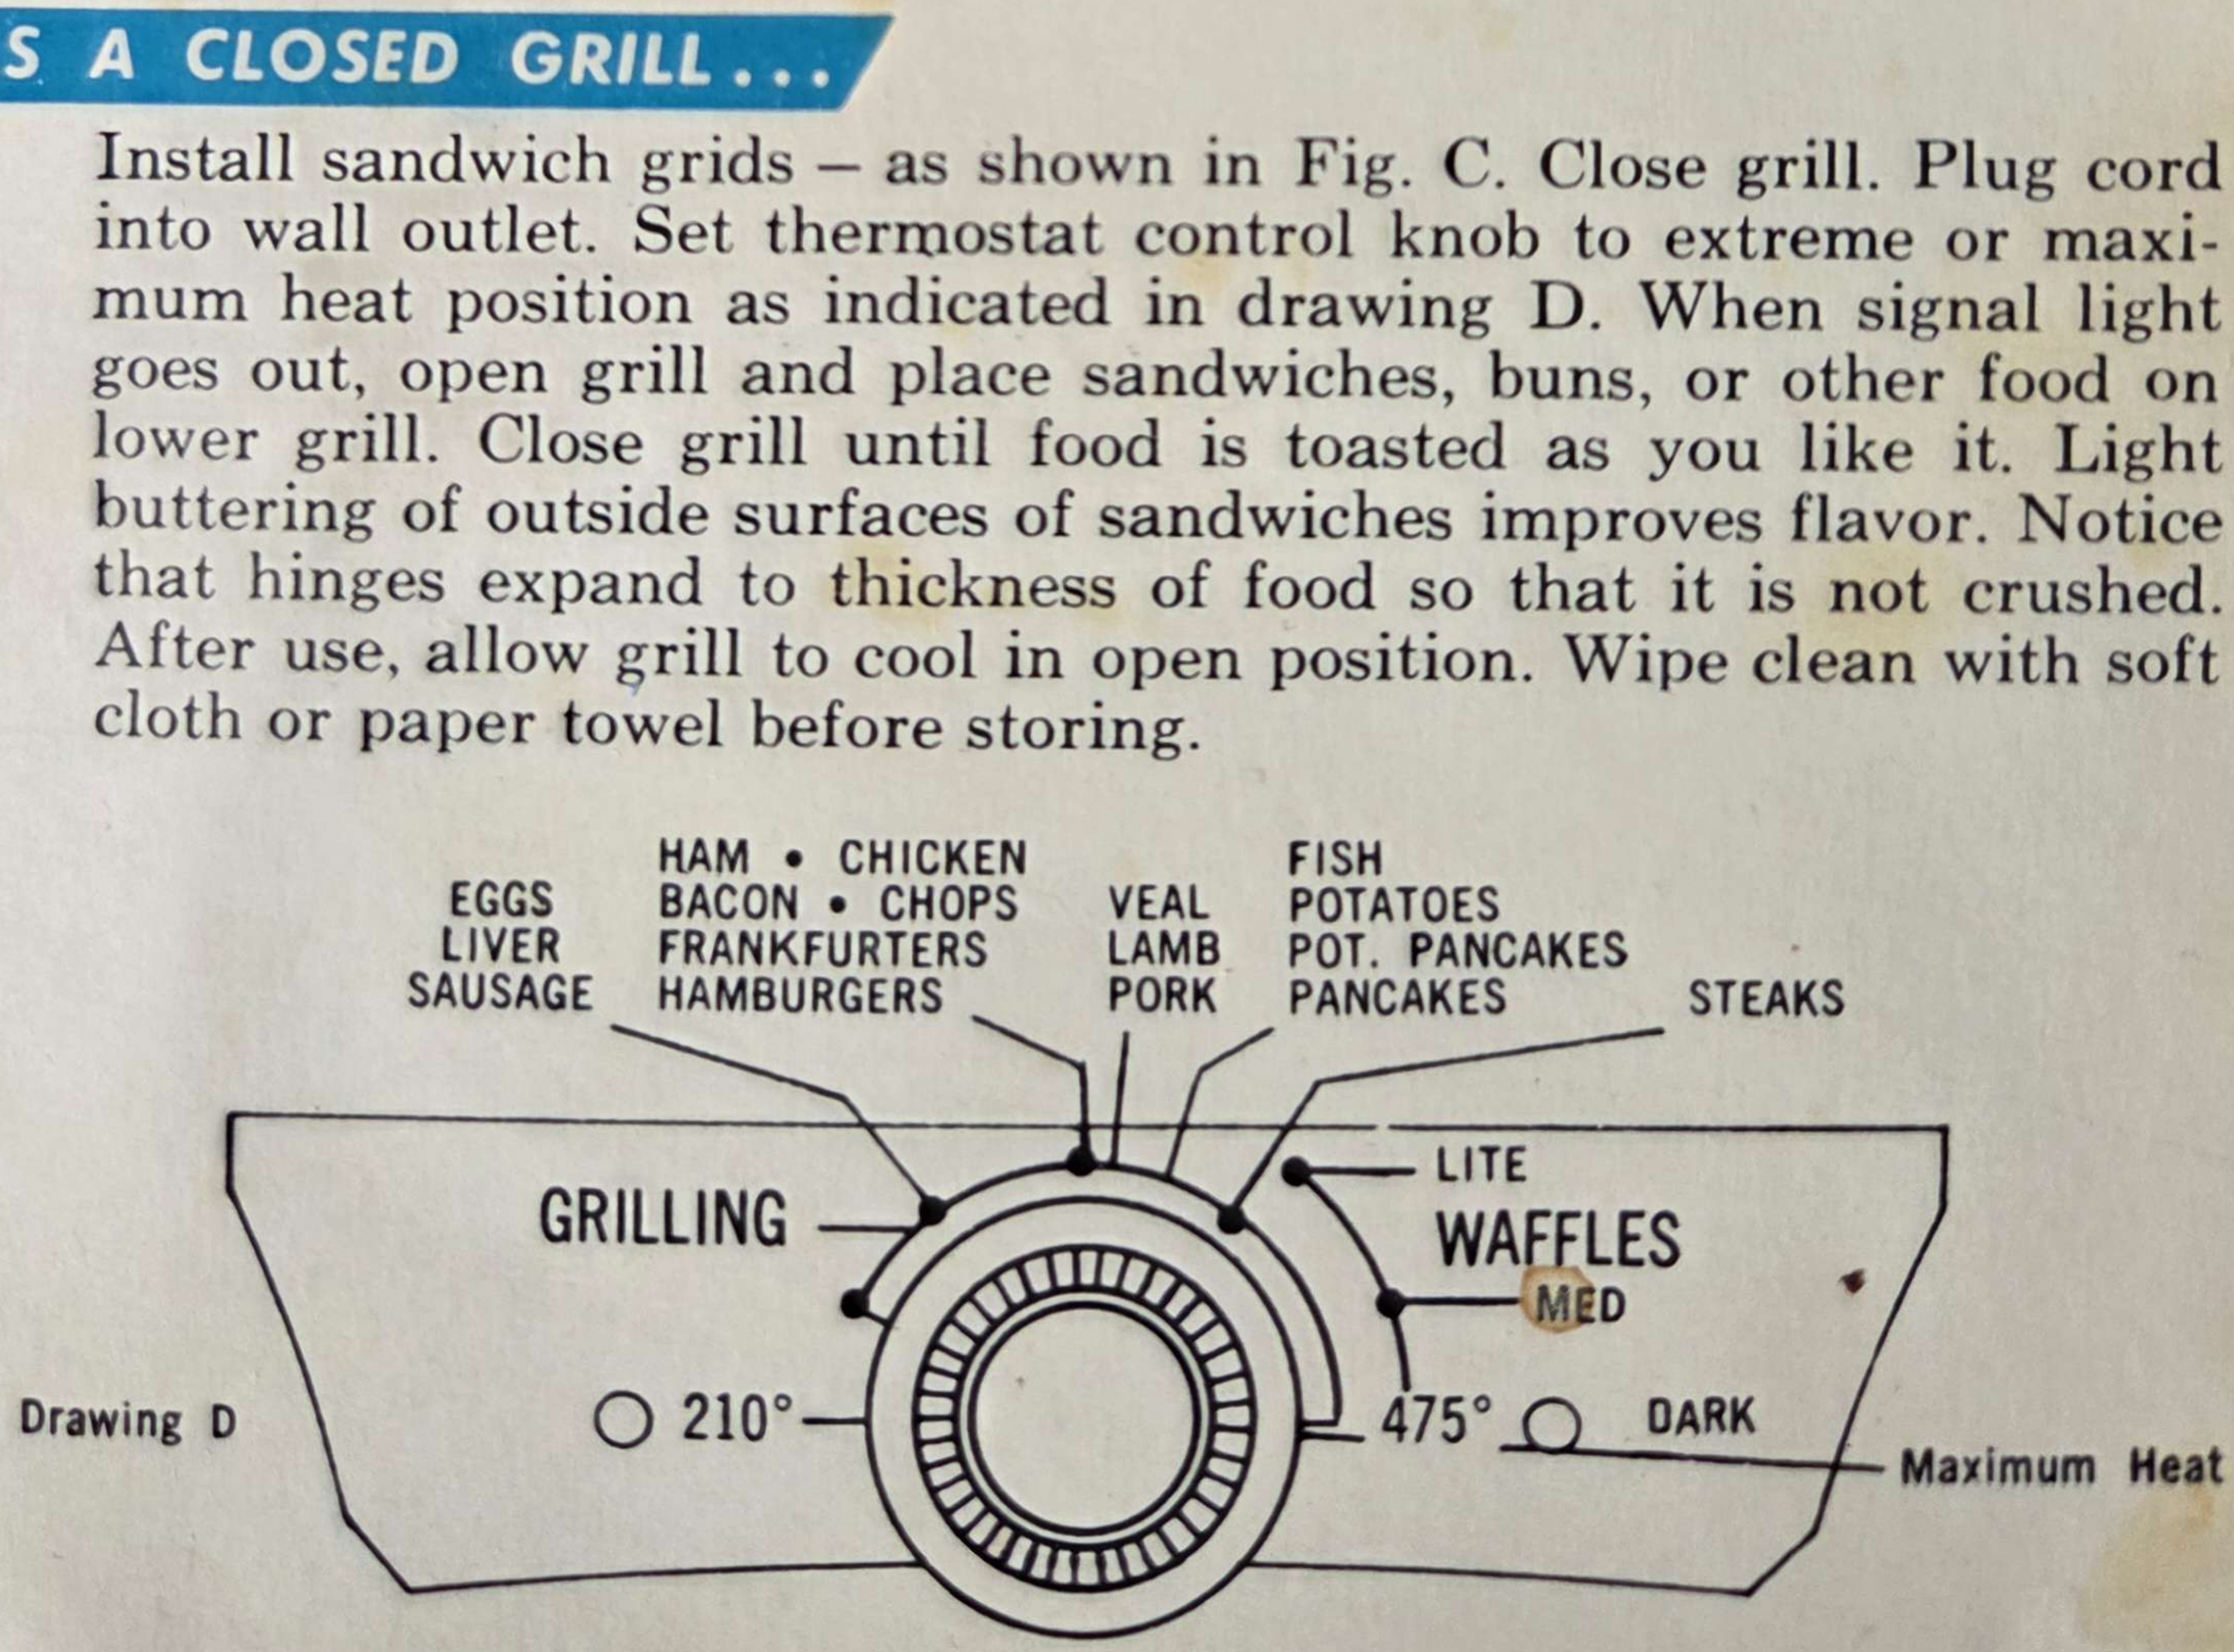

Drawing D

laboratory tested and approved for

DESIGN • QUALITY • PERFORMANCE

KENMORE®

KENMORE GUARANTEE

If this Kenmore portable appliance proves defective within one year of purchase, we will, upon return and without charge, immediately replace it with a brand new appliance.

The Dupont Teflon Finish on this Kenmore appliance will make your waffle making and grilling easier and more pleasant.

It is, however, a finish that can be damaged if not used according to directions. Scratches or cuts do not prevent the continued satisfactory use of this appliance. We are sorry we can not guarantee the finish if metal utensils or scouring pads are used.

120 VOLTS – 1200 WATTS – A. C. ONLY

126680

INSPECTED BY _____

SEARS, ROEBUCK and CO., Made in U.S.A.

P19-1752

PRINTED IN U.S.A.